


DUTCH DOOR INSTALLATION

Dutch Doors are much heavier than typical service doors so 4x6 posts (or larger) are required.


Step 1

Open the boxes and place the door halves on the floor with the fronts facing up. Place the hinges over the holes in the door halves. Drill through the wood using the holes in the hinge side as guides. Insert bolts into the holes. Make sure that the hinges are level and then fasten using a washer and nut.

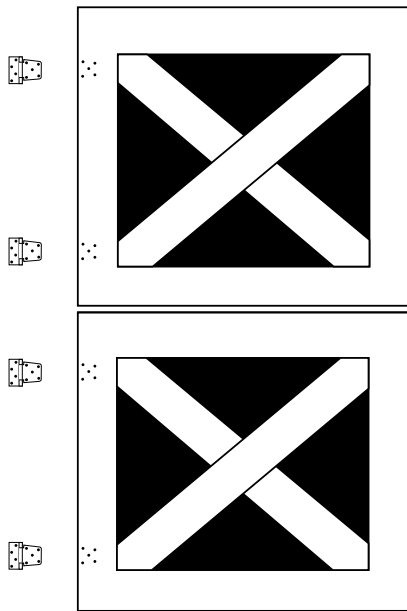




Step 2

Place the bottom half of the door into the door jamb. Make sure the door is level and there is a 1/2" gap from the bottom of the door to the floor. When the door is level, place the hinges on the door jamb. Use the holes on the hinges as a guide for pre-drilling. After pre-drilling the holes insert the screws and fasten.

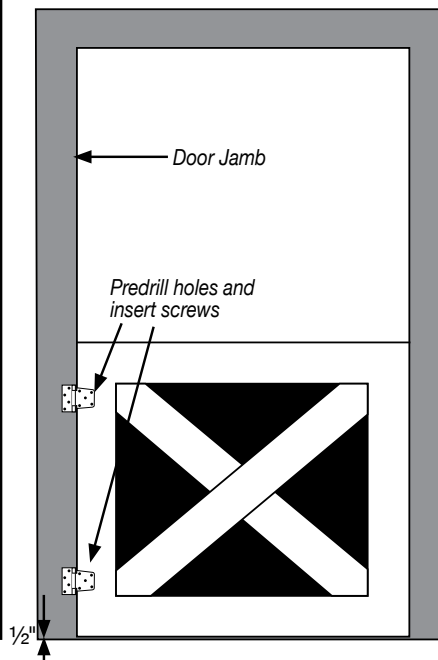



Step 3

Place the top half of the door on top of the lower half. Make sure the door is level and 1/4" above the bottom half of the door. When the top half is in place, put the hinges on the door jamb as a guide for pre-drilling. When the holes are completed insert the screws and fasten.

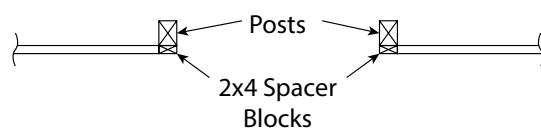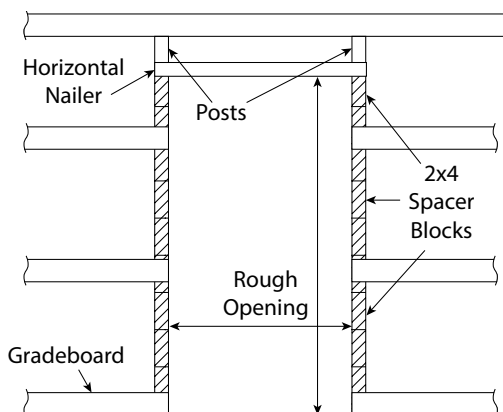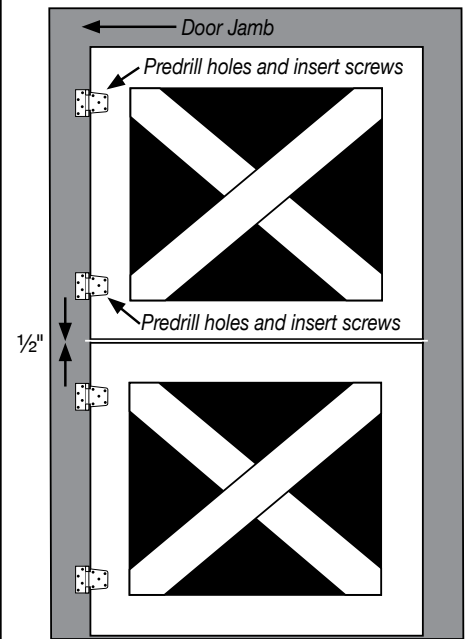


Step 4

Close the two halves of the door. Place the astragal between the two halves. Make sure the double sided edge of the astragal is to the front of the door. Slide the astragal in until it is tight against the bottom half of the door. Hold the astragal as a guide, pre-drill the holes needed for fastening. With the top half of the door open, place screws into the holes of the astragal and fasten.

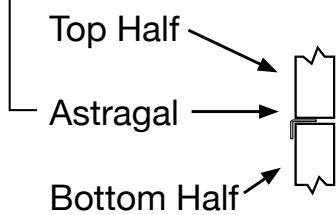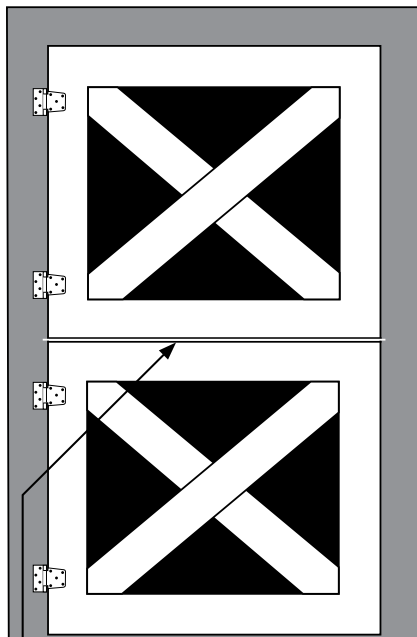

Step 5

Place the barn latch on the bottom door as shown. Use the latch holes for a guide when pre-drilling the holes for the latch. Make sure the latch is level when fastening. Use the supplied plastic caps to plug the remaining holes in the door.

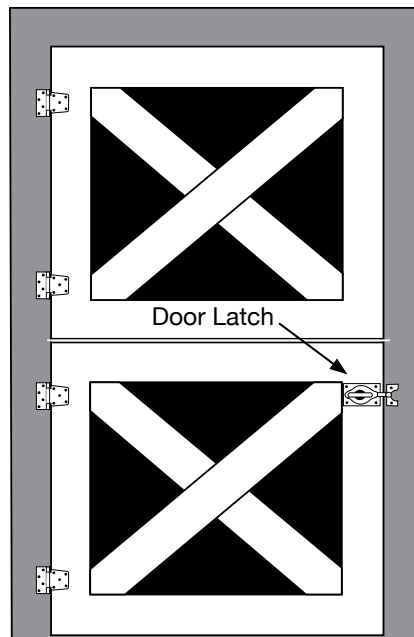

Step 6

Place the bolt latch on the back side of the door. Place the receiving end of the latch on the bottom half of the door. Make sure that the latch is level and the crack between the door halves lines up with the separation of the latch. Use the holes of the latch as guides for pre-drilling the holes. Insert screws into the holes and fasten.

View of Back of the Door

