

# Guide for building BIG DOOR

**10' Bottom Guide**



156-2924

**10' Big Door Track Cover**



156-2948

**6" Double Hem Custom**



156-2060

**6" Heavy Duty Door Handle**



156-5761

**Big Door Trolley  
(Pair)**



156-2940

**Center Door Guide**



156-2943

**Center Latch**



Stock: 155-5596  
Special Order: 155-6184

**Double Trolley Kit**




156-2941

**Fixed C Bracket**



156-2942

**Horizontal Bottom Rail**

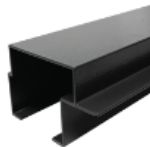

14': 156-2916  
16': 156-2917  
18': 156-2918  
20': 156-2919

**Jamb latch**




Stock: 155-5554  
Special Order: 155-6168

**Round Track**



12': 156-2933  
16': 156-2934  
20': 156-2935

**Steel Box Girts**

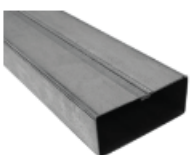


14': 156-2925  
16': 156-2926  
18': 156-2927  
20': 159-2928

**Vertical H-Rail**



14': 156-2908  
16': 156-2909  
18': 156-2910  
20': 156-2911

**Vertical Side Rail**

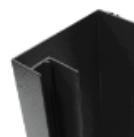

14': 156-2900  
16': 156-2901  
18': 156-2902  
20': 156-2903